


Source: Leece-Neville Heavy Duty Systems Division - Arcade, NY USA  
 Date: July 7, 2017  
 Bulletin No: TSB-1157  
 Models: AVI143P alternators  
 Subject: Alternator Wiring Instructions

Wiring diagrams for AVi143P series alternators.

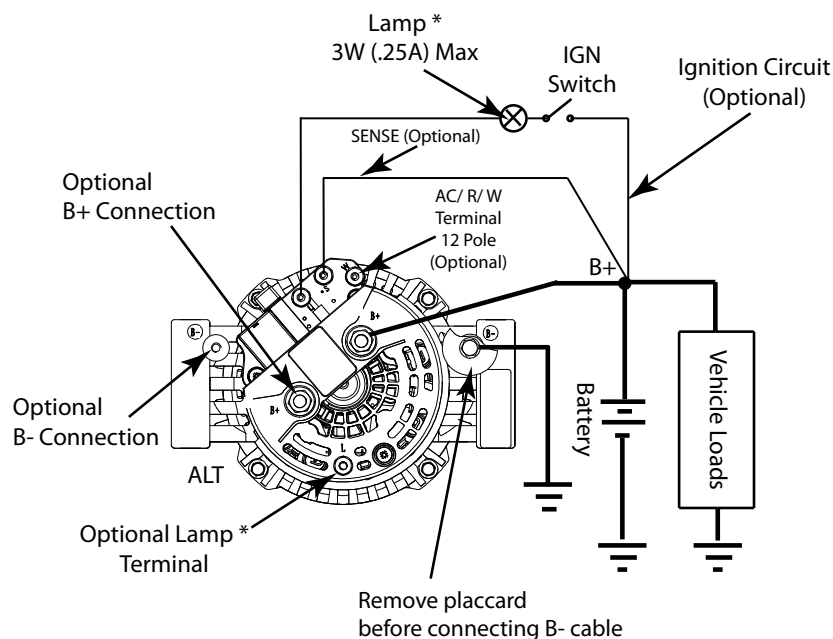

Alternator is self excite.  
 For basic operation B+ needs to be connected. All other connections are optional.  
 Alternator is case ground.  
 \* Lamp/ Relay circuit;  
 Lamp circuit is capable of operating a relay not exceeding a current draw of 100mA from the relay coil.

Terminal Torque Requirements	
Terminal	Torque
B+	8 +/- 1 Nm.
B-	6 +/- 1 Nm.
L	3.5 +/- 0.3 Nm.
W	3.5 +/- 0.3 Nm.

**Important:** The information contained in this bulletin is intended for use by trained, professional technicians who have the proper tools, equipment, and training to perform the required maintenance described above. This information is NOT intended for 'do-it-yourselfers', and you should not assume that this information applies to your equipment. If you have any questions regarding this information please visit our website at [www.prestolite.com](http://www.prestolite.com), or contact our technical service department at: